


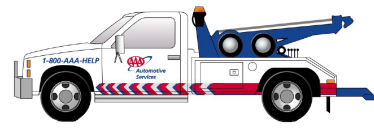

# AAA Service Advisory



**Subject:** Jump Start Procedure for Toyota Hybrids

**Vehicle:**



2013-2018 Toyota Avalon



2008-2018 Toyota Camry



2004-2018 Toyota Prius

Toyota requires using the positive (+) battery connection located in the under hood fuse box on the driver side (figure 1) when jump starting the hybrid vehicles above.

**Tools Required:** 12 volt Jump Pack or 12 volt source with Jumper Cables

**Service Tip:**

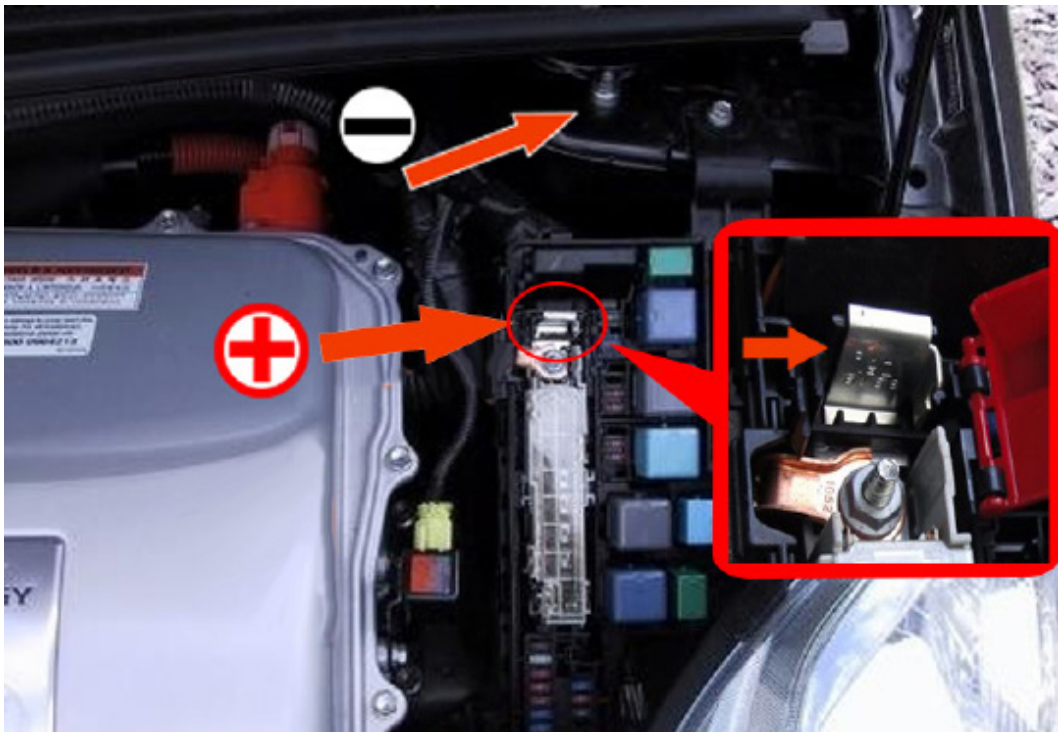


Figure 1

When attaching your jump source to the positive pin located in the fuse box, make sure the cable side of the clamps is contacting the conductive metal tab because the design of the tab may be a metal conductor on one side and plastic on the other. In order to have a good connection, the power side of the clamps need to be in contact with the metal tab. This is an easy On-the-Go that is commonly misdiagnosed as a "No Start" condition in need of a tow.

***(Refer to the AAA Towing & Service Manual prior to servicing this vehicle)***

If you have questions or comments regarding this advisory, please email AAA, Technical Training and Research at:

[RPST@national.aaa.com](mailto:RPST@national.aaa.com)

SA-21 5/8/2018